



## **Model: IG1703**

### **Operating Instructions – Manual Microwave**

#### **PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE**

DO NOT use in a bathroom or outdoors.  
DO NOT allow the Microwave or its lead to be submerged in water.  
DO NOT operate the Microwave on any metal surface.  
DO NOT leave the Microwave unattended whilst in use.  
DO NOT allow children or the infirm to use the Microwave.  
DO NOT cover ventilation slots of the microwave oven.  
DO NOT heat flammable objects such as paper, wood or clothing. Remove packaging from ready made meals in accordance with instructions.  
DO NOT place metallic objects in the microwave oven e.g. metal containers, crockery with metallic finish or trimming, knives, forks, spoons or skewers.  
DO NOT heat airtight objects e.g. sealed containers such as bottles, jars and containers or foods such as eggs, nuts and unpeeled fruit and vegetables.  
TAKE CARE when heating liquids or baby foods. Allow at least 20 seconds settling time for temperature to equalise.

ALWAYS follow cooking instructions when Microwaving food.  
ALWAYS ensure that the power lead is properly connected.  
ALWAYS unplug the Microwave before cleaning.

IMPORTANT – If the mains lead of this appliance becomes damaged then it must be replaced by the manufacturer's service agent, or a suitably qualified person using the same rated cable in order to avoid a hazard.

**THERE ARE NO USER SERVICEABLE PARTS INSIDE AND THE CASING SHOULD NOT BE OPENED BY AN UNQUALIFIED PERSON**

**THIS MICROWAVE IS FOR DOMESTIC USE ONLY**

#### **Electrical Connection**

Ensure your supply is rated at 220~240v and 50/60Hz before operating the appliance. This Microwave is fitted with a rewirable plug incorporating a 13amp fuse. In addition this appliance must be earthed or connected to an earthed supply. In the event of the fuse needing replacement then a 13amp fuse approved by ASTA to BS1362 MUST be used.

IMPORTANT: If the plug fitted is not suitable for your socket, then the 13amp plug supplied should be removed. Before wiring the appropriate plug, please note that the wires in this mains lead are coloured in accordance with the following code:

BLUE: Neutral  
BROWN: Live  
GREEN & YELLOW: Earth

As the colours in the mains lead may not correspond to the coloured markings in your plug, proceed as follows:

Connect the BROWN wire to the terminal marked 'L' or coloured RED, connect the BLUE wire to the terminal marked 'N' or coloured BLACK, and connect the GREEN & YELLOW wire to the terminal marked 'E' or coloured GREEN or GREEN AND YELLOW. If in doubt consult a suitably qualified electrician.

## Using Your Microwave



- 1) Place the microwave on a stable flat surface, away from water, and other sources of heat. Make sure there is adequate ventilation for the microwave oven by leaving 10cm (4 inches) behind and 20cm (8 inches) above and beside the microwave oven.
- 2) Install the roller ring and turntable and ensure they turn freely.
- 3) Plug into a suitable power outlet, ensuring that the cable is neither near the heat source nor likely to get caught.
- 4) Pull open door and place the food on the glass turntable or on a microwave safe plate or dish and close the door.
- 5) Set the desired power level using the power control.
- 6) Set the timer. For times less than 5 minutes turn the timer passed 5 minutes then back to the desired time.
- 7) The microwave oven will start operating and the turntable will start rotating.
- 8) To stop the microwave oven temporarily pull open the door.
- 9) To stop permanently set the timer to zero "0".

### Defrosting

- 1) Set the power at defrost.
- 2) Set the timer remembering defrosting takes longer than cooking.
- 3) Turn the food at least once. Remove food from the microwave oven once it is defrosted and allow to stand before cooking. Meat is defrosted once a fork or skewer can be pushed through the centre. It should then be allowed to stand until it is fully thawed.

### Cleaning

1. Switch the microwave "OFF" disconnect from power and allow it to cool down.
2. Clean with a soft cloth.
3. Do not immerse any part of the microwave in water and ensure all connections, switches and sockets are kept dry.
4. Chemicals, detergents or any abrasive powder, pads or polish of any kind must not be used as they can damage the microwave.
5. Never use any pointed or sharp articles for cleaning inside and outside of the microwave oven.

### Disposal Information



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

# IGENIX

Distributed By PikaPak, Ipswich ,Suffolk IP3 9RR TEL 01473 271272